

Operating instructions for the Peristaltic pump out system

AS A WARNING: Please do not drop the suction hose to the bottom of the marina as this sucks up mud and clogs the system

Instructions:

1. Ensure the valve is in the closed position
2. Turn on the power switch on the piling
3. Activate the pump using the on/off control
4. Remove deck waster fitting cover from boat
5. Connect suction hose fitting to deck waste fitting
6. Insert universal rubber nozzle fitting firmly into deck waste fitting
7. Slowly open valve and observe flow through sight glass
8. When waste tank is empty, disconnect suction hose from deck waste fitting
9. Flush suction hose with sea water for 30 seconds
10. Return valve to the closed position
11. Turn off pump and return suction hose to rack